


## ENDURO V5 RIGGING DIAGRAM

BRIDLE LINES SHOULD BE REGULARLY CHECKED AND MAINTAINED IN THE CORRECT TRIM OR THE KITE WILL NOT PERFORM AS DESIGNED. IF THEY ARE WORN OR NOT TO FACTORY SPECIFICATION (+ OR - 20MM) THEY SHOULD BE REPLACED. REPLACEMENTS CAN BE ORDERED INDIVIDUALLY OR AS A FULL SET FROM YOUR SHOP/DEALER.

1. Open the kite out in a large space.
2. Inspect all bridle lines for wear/damage. Take note or label lines to be replaced.
3. Use a tape measure to measure the remaining bridles. Ask a friend to hold the end of the tape measure and bridle line in position to get an accurate measurement.
4. Pull on the line to add some tension and note each measurement.
5. Refer to the bridle line measurements sheet and rigging diagrams. Take note or label lines to be replaced.
6. Replace all bridle lines as necessary.

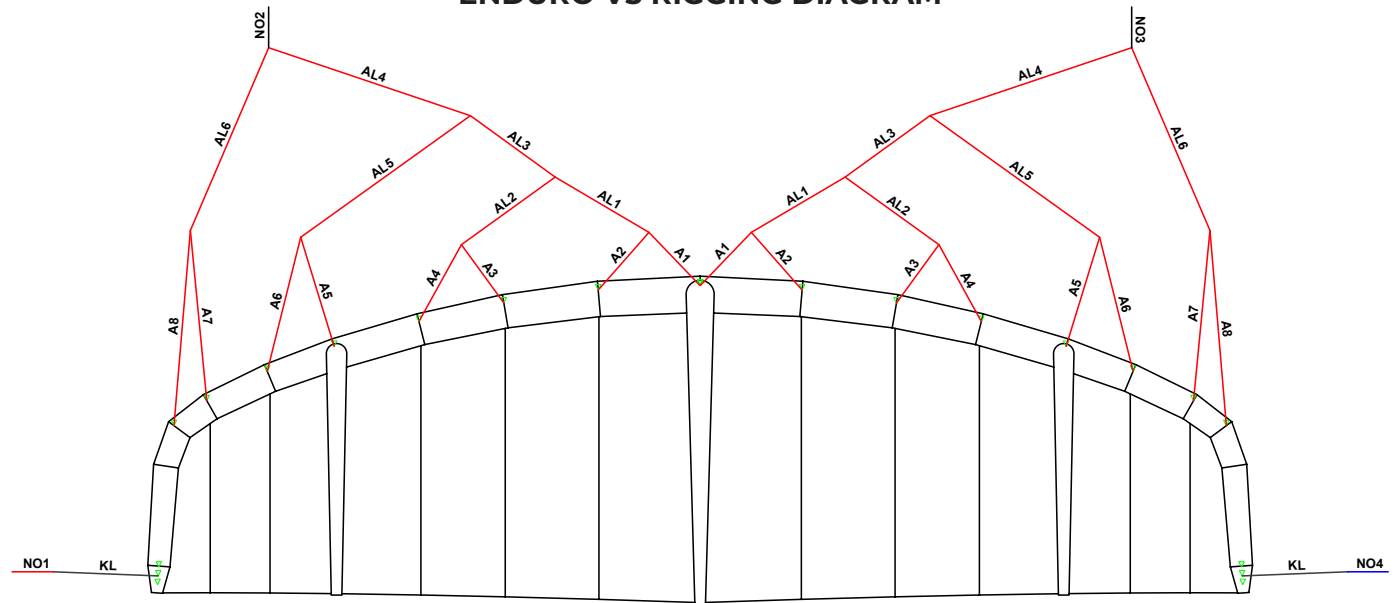

### BRIDLE CHECK SHEET. ALL MEASUREMENTS IN MM

	5m	6m	7m	8m	9m	10m	11m	12m	13m	14m
<b>A1</b>	440	490	540	580	610	650	690	720	750	920
<b>A2</b>	270	300	330	360	381	400	420	440	460	450
<b>A3</b>	410	450	490	530	560	580	620	650	680	700
<b>A4</b>	240	260	280	300	320	340	360	375	391	410
<b>A5</b>	370	410	450	480	510	530	570	595	620	640
<b>A6</b>	270	300	320	350	370	390	410	430	450	460
<b>A7</b>	210	230	250	270	290	300	320	330	340	360
<b>A8</b>	160	180	190	210	220	230	250	260	270	280
<b>AL1</b>	650	715	770	830	880	920	970	1020	1060	1100
<b>AL2</b>	210	230	250	270	290	300	320	330	340	355
<b>AL3</b>	540	590	640	690	730	760	810	845	880	910
<b>AL4</b>	470	515	560	600	640	670	710	740	770	800
<b>AL5</b>	290	320	340	370	390	410	430	455	470	490
<b>AL6</b>	490	540	590	630	670	700	740	775	810	840
<b>KL</b>	330	360	380	420	450	480	550	580	610	640